

	Weekly	Free 600 miles (1,000km)	Every 3,000 miles (5,000km)	Every 6,000 miles (10,000km)	Every 9,000 miles (15,000km)	Every 12,000 miles (20,000km)	Every 18,000 miles (25,000km)
Check all controls, lights, horn, instruments, windscreen wiper, etc.	X	X		X		X	X
Check headlamp alignment				X		X	X
Check windscreen washer reservoir	X						
<b>Road test</b>							
Adjust carburettor and ignition as necessary		X	X	X	X	X	X
Check brake function		X	X	X	X	X	X

Every 36,000 miles (60,000km) the hydraulic braking system should be overhauled, checking all bundy pipes and replace all flexible hoses. Replace brake wheel and master cylinder seals, or replace the units. Change the hydraulic brake fluid.